 


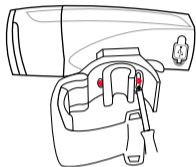
 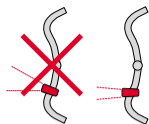


# SPORTSTER

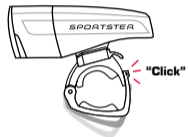

 
2 x click = on / standard  
 + 1 x click = power  
 + 1 x click 5 sec. = off




**Battery control**

**SIGMA**



100 - 70%
70 - 50%
50 - 35%
35 - 20%
20 - 5% / 5 - 0%



Ladevorgang  
 Charging  
 Charge

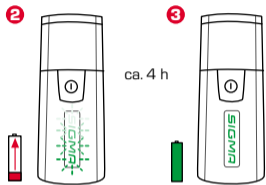


# MONO RL

 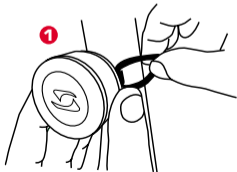

1 x click = on  
 + 1 x click = off

 **International version only:**  
 1 x click = on  
 + 1 x click = flashing  
 + 1 x click = off




**Battery control**

85% 15%



Ladevorgang  
 Charging  
 Charge

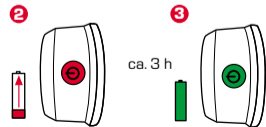

Art.-Nr. 18552



LADEGERÄT + MICRO USB KABEL  
CHARGER + CHARGING CABLE MICRO-USB

Art.-Nr. 18553



MICRO USB KABEL  
CHARGING CABLE MICRO-USB

Art.-Nr. 17520



ERSATZHALTERUNG SPORTSTER  
MOUNTING SPORTSTER

**SIGMA**  
GERMANY


**USB  
CHARGING**


SPORTSTER / MOND RL

**SIGMA-ELEKTRO GmbH**

Dr. -Julius-Leber- Straße 15  
D-67433 Neustadt / Weinstraße

**SIGMA SPORT USA**

3487 Swenson Ave.  
St. Charles, IL 60174, U.S.A.

**SIGMA SPORT ASIA**

4F, No.192, Zhonggong 2<sup>nd</sup> Rd.,  
Xitun Dist., Taichung City 407, Taiwan

