




MOUNTING / MONTAGE

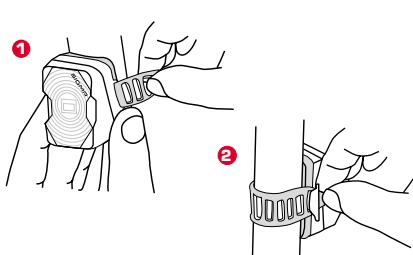



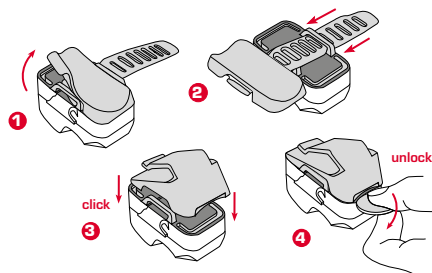


CLIP-ON BRACKET / CLIP-HALTERUNG

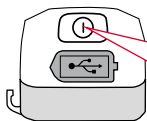

MODES / MODI



- 1 x click = on / standard 
- + 1 x click = High power 
- + 1 x click = High power flashing 
-
- + 1 x click 5 sec. = off 

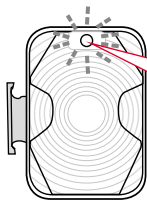


Battery control

70%


30%

CHARGING / LADEVORGANG

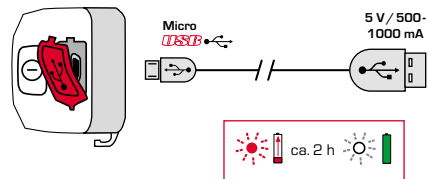

Please always keep the silicone plug closed after charging. /
 Achten Sie bitte darauf, dass die rotmarkierte
 Abdichtung stets korrekt verschlossen ist.

Art.-Nr. 18552

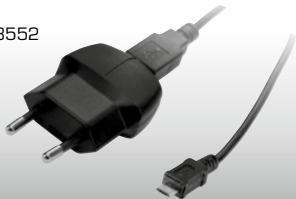

LADEGERÄT + MICRO USB KABEL
CHARGER + CHARGING CABLE MICRO-USB

Art.-Nr. 18553



MICRO USB KABEL
CHARGING CABLE MICRO-USB



USB
CHARGING

USB CABLE
INSIDE

NUGGET FLASH

SIGMA-ELEKTRO GmbH

Dr. -Julius-Leber- Straße 15
D-67433 Neustadt / Weinstraße

SIGMA SPORT USA

3487 Swenson Ave.
St. Charles, IL 60174, U.S.A.

SIGMA SPORT ASIA

4 F, No.192, Zhonggong 2nd Rd.,
Xitun Dist., Taichung City 407, Taiwan

